HP StorageWorks RDX DL Server Module

Installing the unit

HP StorageWorks RDX DL Server Module is an internal assembly for a Proliant DL server. It is supplied with a USB and a power cable.

1. Power down the server, remove the power cord and then remove the access panel.
2. If an optical drive is already installed, remove it, leaving the SATA cable connected to the system board. You can re-use the drive and cable with the HP StorageWorks RDX DL Server Module.
3. Remove the optical drive cage from the server, as instructed in the HP ProLiant Server User Guide. Retain the screws.
4. Install and route the supplied power and USB cables from the server's system board.

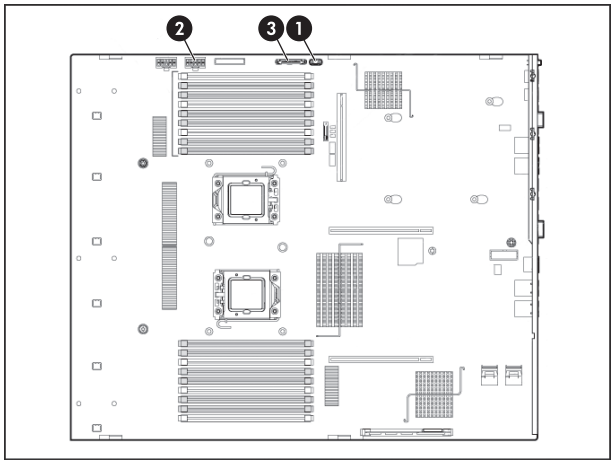

1 internal USB connector
2 power connector
3 SATA optical drive connector (optional)

5. Slide the HP StorageWorks RDX DL Server Module partially into the empty server bay.
6. Connect the other end of the power and USB cables to the connectors on the rear of the HP StorageWorks RDX DL Server Module.

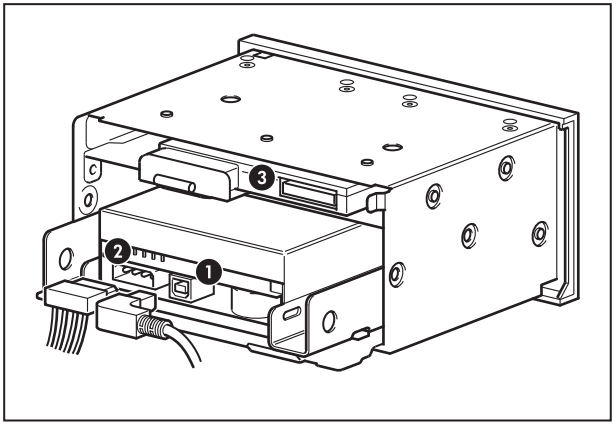

1 USB connector
2 power connector
3 SATA optical drive connector (optional)

7. If you wish to use the optical drive, remove the blank from the HP StorageWorks RDX DL Server Module and insert the CD or DVD drive that you removed in step 2. Reconnect the SATA cable to the rear of the optical drive.
8. Push the HP StorageWorks RDX DL Server Module fully into the bay and secure it using the screws that you removed in step 3.

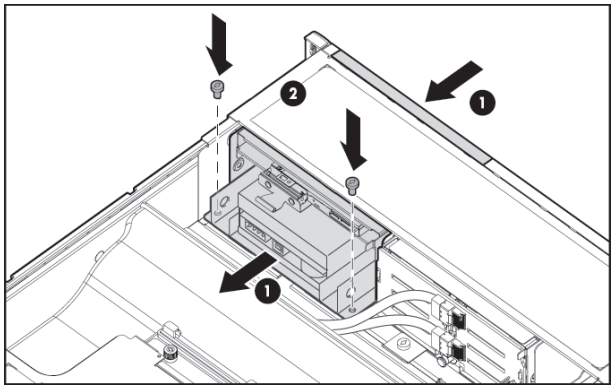

1 Install HP StorageWorks RDX DL Server Module
2 Secure with screws

9. Replace the server covers and power cable, power up the server, as instructed in the HP ProLiant Server User Guide. Refer to the HP RDX Backup System User Guide for operating and troubleshooting information.

Returning the unit

IMPORTANT: Do not return the complete HP StorageWorks RDX DL Server Module. Follow the troubleshooting processes in the appropriate optical drive or RDX user guide. If there is an issue that requires replacement, follow the instructions below.

If there is a problem with the optical drive, remove it and return for servicing.

If there is a problem with the RDX Removable Disk Backup System, detach the cables, remove the four screws that secure the RDX unit to the module and keep them safe for use with the replacement module. Remove the RDX unit from the module and return it for servicing. **It is important to retain the cables; the replacement unit does not include cables.**

Return details are different for the two units; details can be found on the base of the units after you remove them.

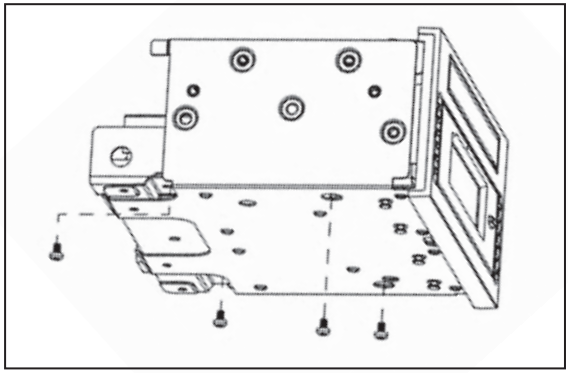

© 2009 by Hewlett-Packard Development Company, L.P.

5697-7882